


No.	Component Name	Amount	ComponentNo.
1	HexagonScrew	16	PC000001SW
3	HexagonScrew	8	PC000004SW
&4	DownBallSeat(S303)	2	PA000014
-	DownBallSeat(P)	2	PB000114
-	DownBallSeat(T)	2	PB000151
#5	Oring	4	PB000083
&6	UpBallSeat(S303)	2	PA000026
-	UpBallSeat(P)	2	PB000113
-	UpBallSeat(T)	2	PB000150
&7	UpBallCover(A)	2	PA000032
-	UpBallCover(P)	2	PB000127
-	UpBallCover(E)	2	PB000129
&8	DownBallCover(A)	2	PA000032
-	DownBallCover(P)	2	PB000127
-	DownBallCover(E)	2	PB000129
&9	Ball(T)	4	PB000039
-	Ball(S316)	4	PA000110
#10	Pad	2	PB000013
11	Housing of Pump	2	PA000047
12	SteelHexagonScrew	2	PC000176
13	Steel Washer	4	PC000057
&14	Pad of Diaphragm	2	PA000059
&15	Diaphragm(T)	2	PB000026
-	Diaphragm(U)	2	PB000032
&17	Pad of Diaphragm	2	PA000059
#18	Oring	2	PD000011
19-28	ShaftCover-A Set	1	A16-19-28
20-28	ShaftCover-B Set	1	DS03-20-28
21-26	AxisSwitch Set	1	DS03-21-26
22-30	ShaftOfDiaphragm Set	1	DS03-22-30
#23	Oring	2	PB000001
#24	Oring	2	PD000001
#31	Oring	2	PD000006
32	HexagonScrew	4	PC000005SW
#33	Abnormal Oring	1	PD000162
#34	Abnormal Oring	1	PD000161
35-45	Air-Valve Set	1	DS03-35-45
44	BodyOfCylinderBase	1	PA000143N
44-1	CoverOfCylinderBase	1	PA000359
44-3	HexagonScrew	4	PC000114SW
46	Pipe Set	2	PA000131T
47	HexagonScrew	8	PC000100SW
48	BufferPad	2	PD000056
50	Silencer	1	PB000045
51	AirPressureRoomOfPump	2	PA000215N
&53	SlitheryMassValve	1	PB000334
&54	IncludePly	1	PB000072

("&"Consumptive Parts Possible)

("#"SPARE SEAL)

DS04-AAT-XXXX-03

Exploded View

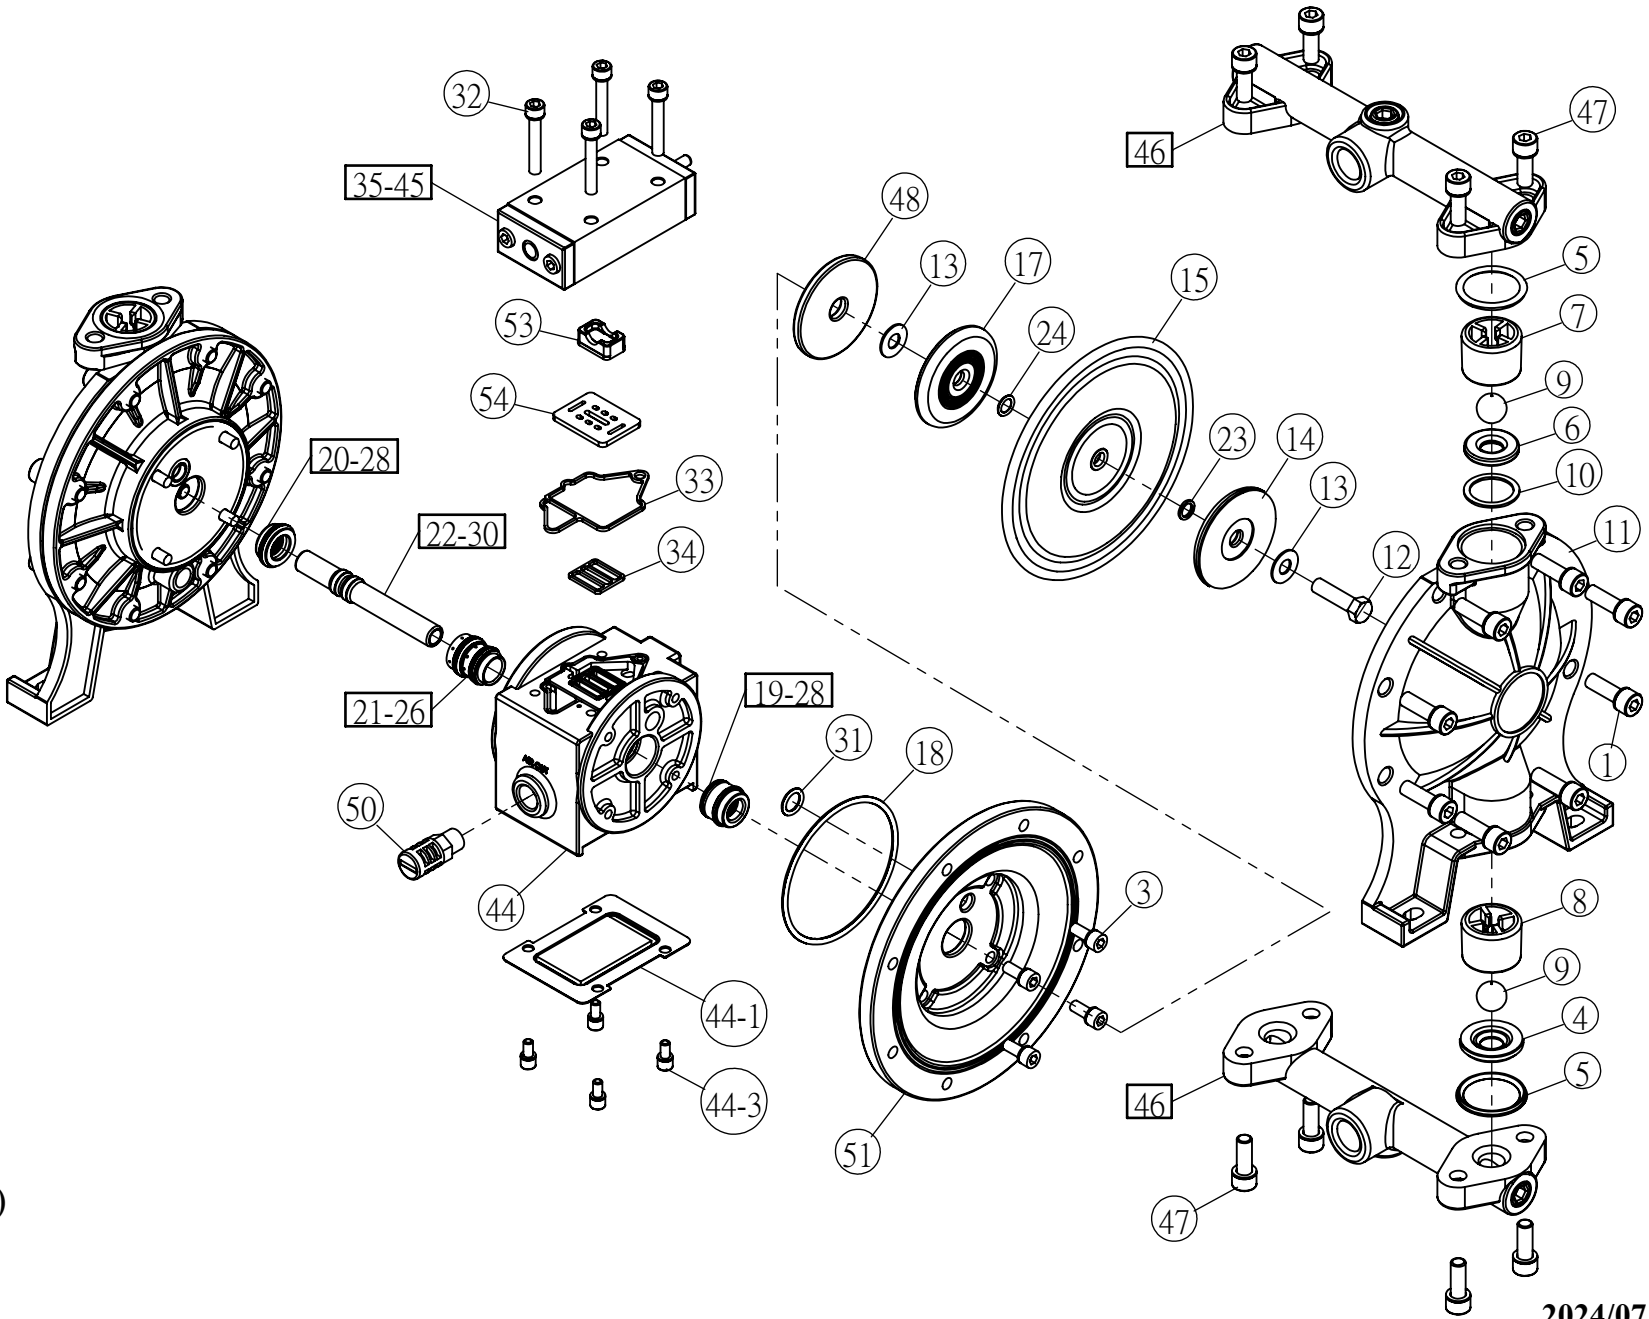


DS04-AAT-XXXX-03

Exploded View

("&"Consumptive Parts Possible)


("#"SPARE SEAL)

21-26|AxisSwitch Set|1|DS03-21-26

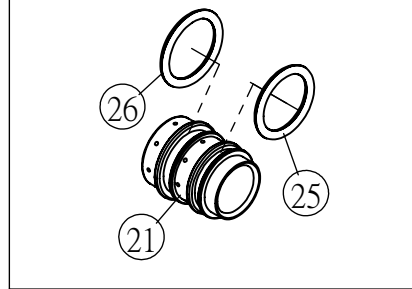


No.	Component Name	Amount	ComponentNo.
19	ShaftCover-A	1	PB000170
20	ShaftCover-B	1	PB000173N
21	AxisSwitch	1	PA000358
&22	ShaftOfDiaphragm	1	PA000357
#25	Oring	2	PD000023
#26	Oring	1	PD000050
#27	Oring	1	PD000054
#28	U-type Oring	2	PDAP0012
#29	Oring	2	PD000057
#30	Teflon Oring	2	PB000224


20-28|ShaftCover-B Set|1|DS03-20-28

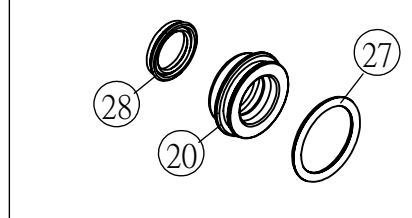


19-28|ShaftCover-A Set|1|A16-19-28

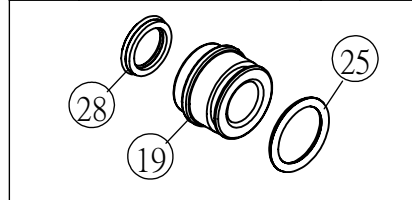

22-30|ShaftOfDiaphragm Set|1|DS03-22-30

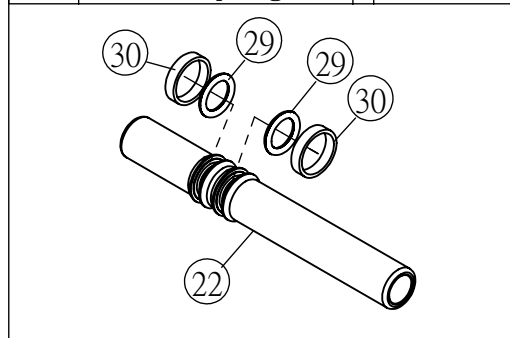

35-45|Air-Valve Set|1|DS03-35-45

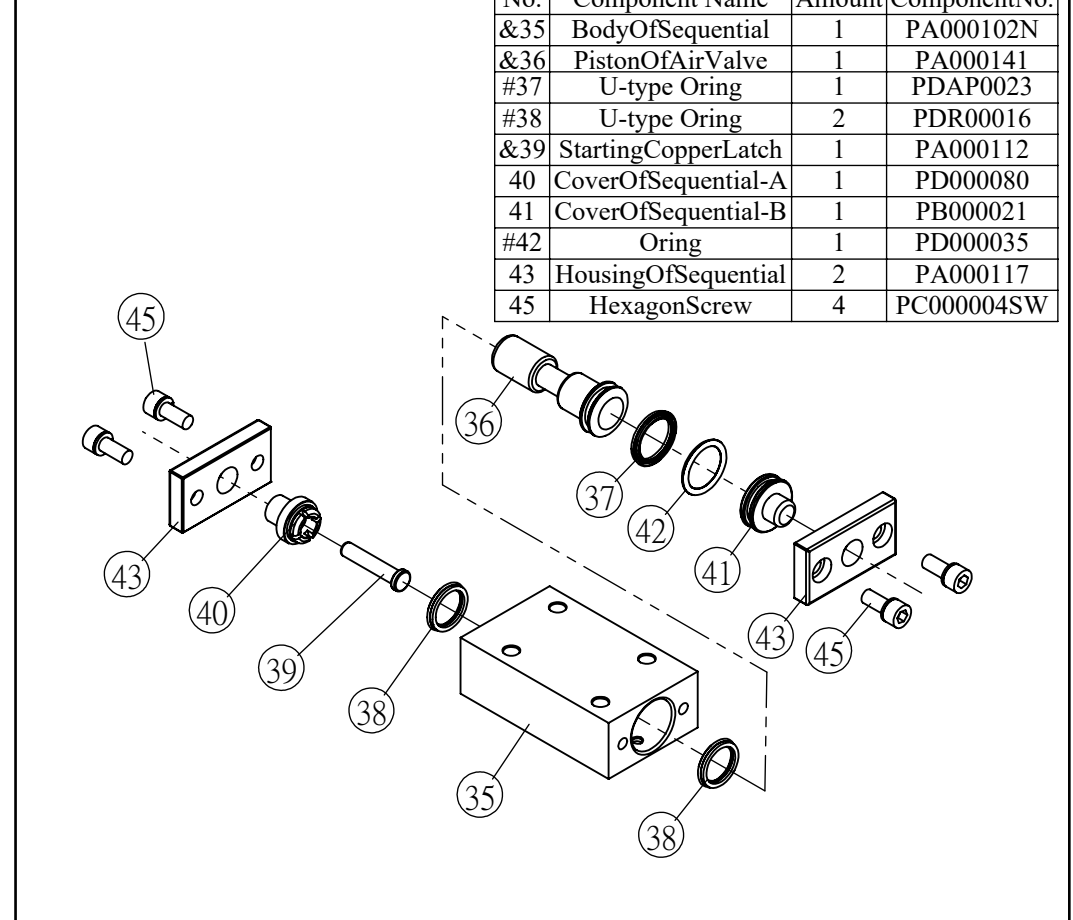

No.	Component Name	Amount	ComponentNo.
&35	BodyOfSequential	1	PA000102N
&36	PistonOfAirValve	1	PA000141
#37	U-type Oring	1	PDAP0023
#38	U-type Oring	2	PDR00016
&39	StartingCopperLatch	1	PA000112
40	CoverOfSequential-A	1	PD000080
41	CoverOfSequential-B	1	PB000021
#42	Oring	1	PD000035
43	HousingOfSequential	2	PA000117
45	HexagonScrew	4	PC000004SW